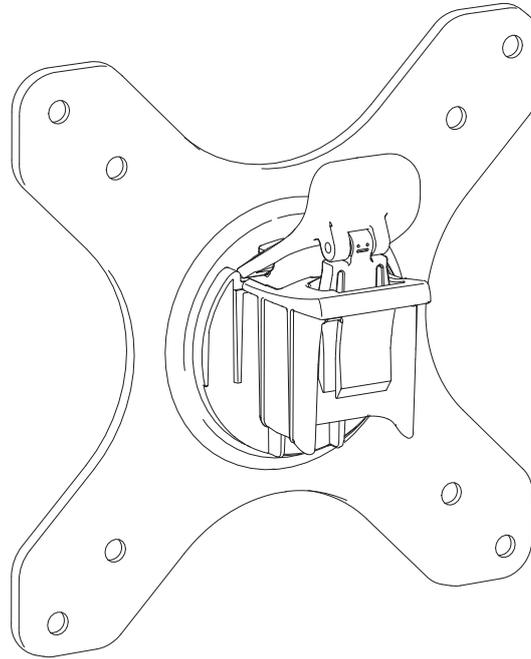
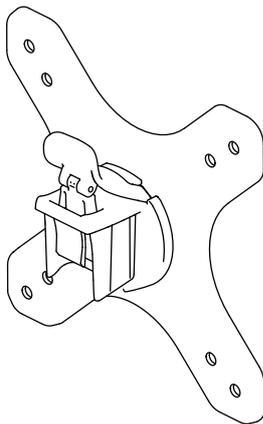


VESA Head



COMPONENT CHECKLIST



A
VESA Head
(x1)



B
Screw
M4x25mm
(x4)



C
Screw
M4x16mm
(x4)



D
Screw
M4x12mm
(x4)



E
Spacer
(x4)



F
Security
screw
(x1)



G
4mm
allen key
(x4)

REQUIRED TOOLS

- Phillips Head Screwdriver

WEIGHT RANGE

0 - 12kg (0 - 26.5lbs)

Monitor weight should be within the weight range of all modular elements that make up the complete monitor mounting solution.

IMPORTANT INFORMATION

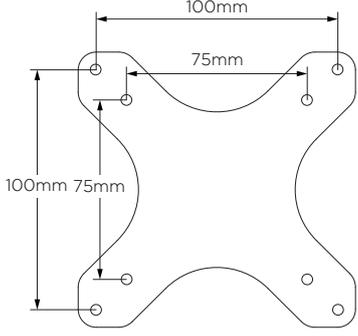
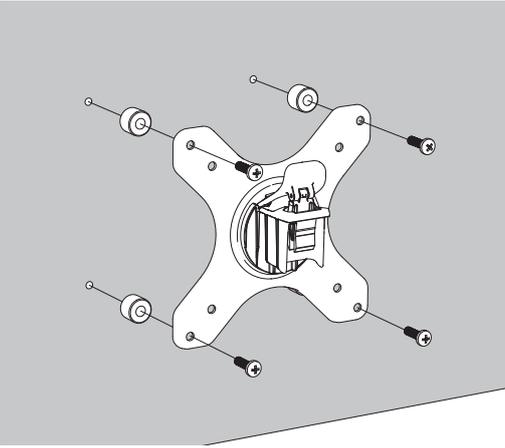
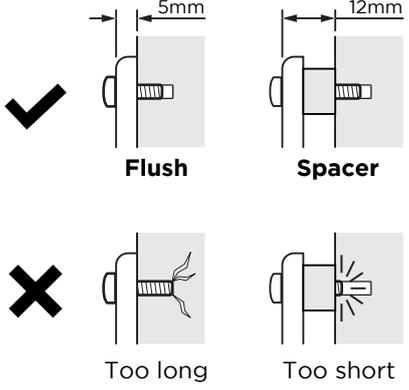
! Please ensure this product is installed as per these installation instructions.

! The manufacturer accepts no responsibility for incorrect installation.

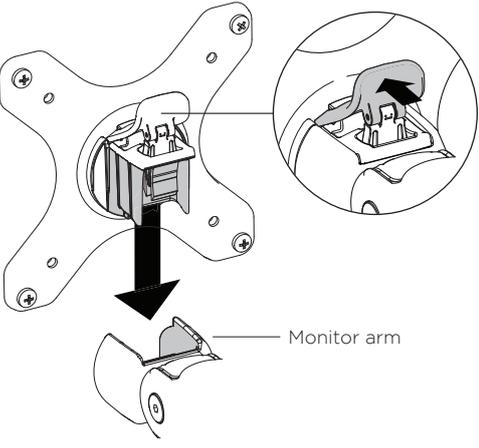
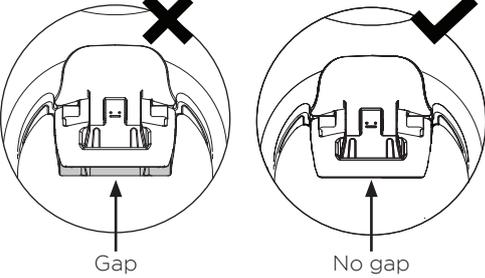
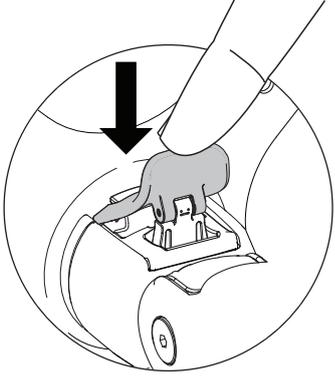
! This product is compatible with Atdec AWM Series products.

! Curved monitors, deep devices (such as all-in-one PCs) and offset VESA locations exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range. Please contact Atdec if you would like further information.

1. Attach VESA head to monitor

<p>1.1 VESA mounting compatibility</p>  <p>Note: For other sizes, use a suitable adaptor plate (sold separately).</p>	<p>1.2 Screw the VESA head onto monitor</p>  <p>Note spacers may be required for curved, recessed or uneven monitor surfaces.</p>	<p>1.3 Ensure the correct screw length is used to attach the monitor.</p>  <p>✓ Flush (5mm) Spacer (12mm)</p> <p>✗ Too long Too short</p>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

2. Mount monitor

<p>2.1 Insert VESA head into the monitor arm</p>  <p>Monitor arm</p>	<p>2.2 Ensure that the VESA head sits flush within the monitor arm. There should be no gap</p>  <p>Gap No gap</p>	<p>2.3 Push the lever down to secure it to the arm assembly</p> 
--------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------

3. Optional - Install security screw

3.1 To install the optional security screw tilt the head upwards

