



Post Clamp

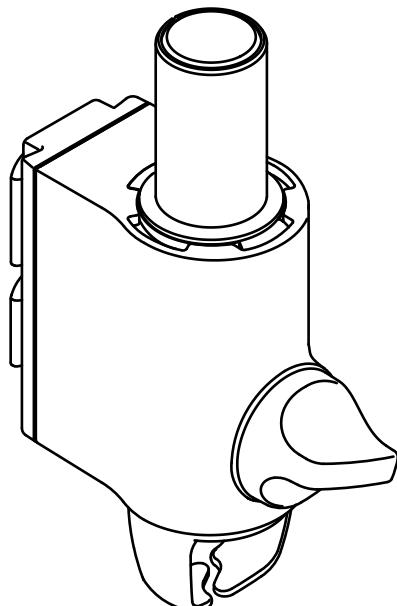

COMPONENT CHECKLIST

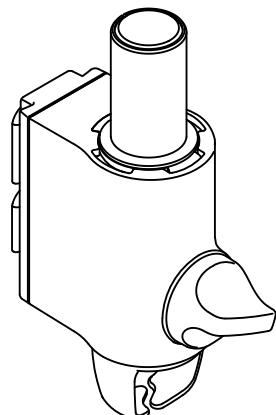

A
Post Clamp
(x1)

Desk

Wall

REQUIRED TOOLS


- All tools provided

IMPORTANT INFORMATION


- ! Please ensure this product is installed as per these installation instructions.
- ! This product is compatible with AWM Series Arms, Posts and Wall Channels.
- ! The manufacturer accepts no responsibility for incorrect installation.

1. Fix Clamp to Post or Wall Channel


1.1 Ensure knob is undone.

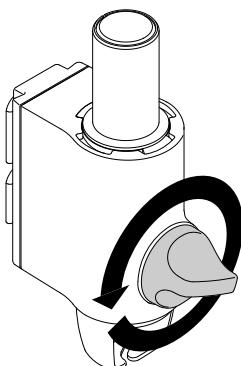

1.2 Slide Post Clamp into channel.

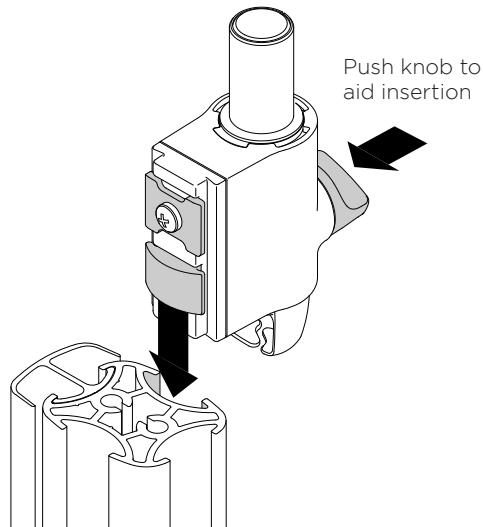


1.3 Hold clamp in desired position on post and turn knob to lock in place.

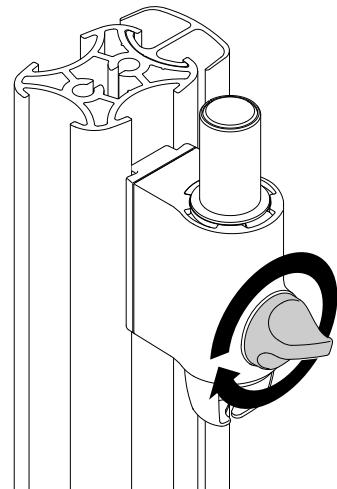


2. Set arm rotation to 180° (optional)

Note: default arm rotation is set to rotate 360°


2.1 Remove plastic sleeve.

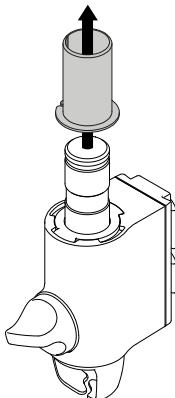


2.2 Remove rotation ring

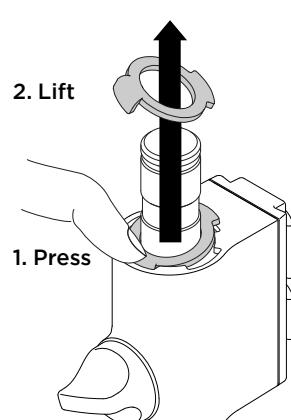

2.3 Place rotation ring in the desired position.

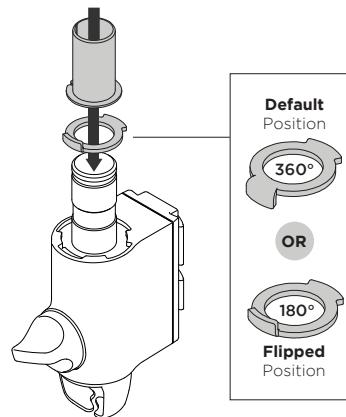


Note: Place the rotation ring depending on what post channel the arm will be attached to. The tag should always face towards the user.

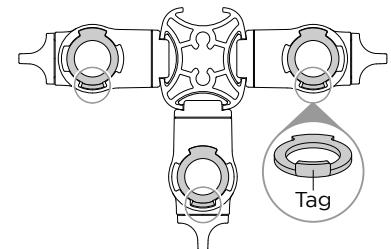


3. Fit AWM Series arm to Post Clamp

3.1 Push arm onto clamp.

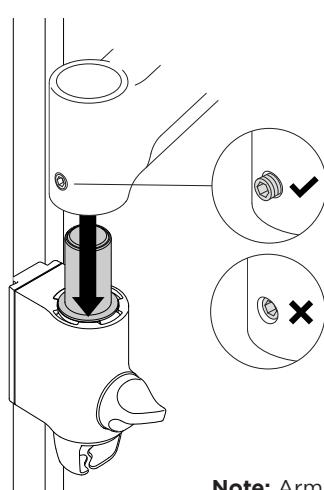

Note: Arm sold separately

3.2 Ensure arm is fully pushed onto clamp.

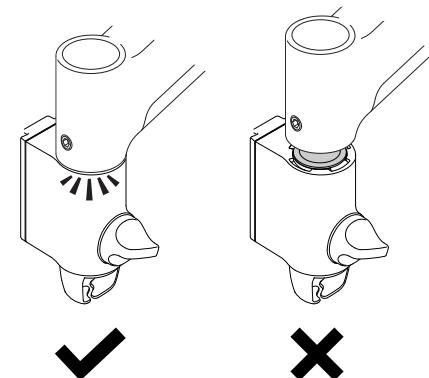

3.3 Tighten joint screw.



Note: Check the arm rotation is smooth after tightening.