



# Post

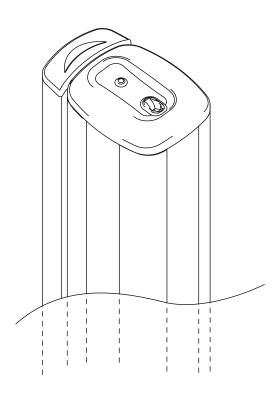

 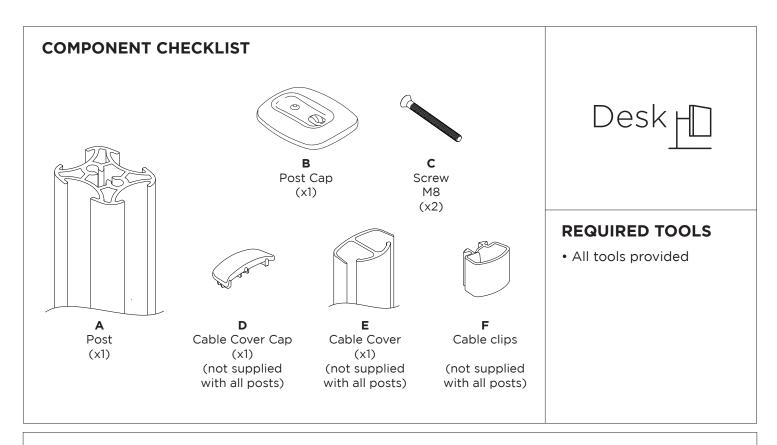


## **IMPORTANT INFORMATION**

- ! Please ensure this product is installed as per these installation instructions.
- ! This product is compatible with Atdec AWM Series products.
- The manufacturer accepts no responsibility for incorrect installation.

## 1. Attach Post to fixing (fixing sold seperately)

1.1 Follow the installation guide provided with your fixing to attach it to the post and fit it to the worksurface.



#### **AWM Fixing options**



**Bolt Through** Kit AWM-FB



**F Clamp** AWM-FF



**Heavy Duty F Clamp** AWM-FH



C Clamp AWM-FC



Grommet Clamp AC-GC

#### 2. Check post placement & arm positions

2.1 Do not mount a monitor arm on the rear channel of a post when the post is fixed to the desk using an F Clamp, Heavy Duty F Clamp, or C Clamp.



**F Clamp** 

AWM-FF




**Heavy Duty** F Clamp AWM-FH




C Clamp



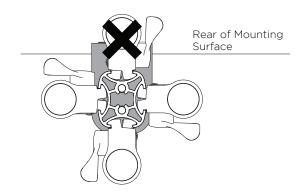

## 3. Cable cover position and post cap


**3.1** To reposition the cable cover, pull it straight up and out of the post and insert it into any of the available channels

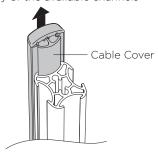

Note: The cable cover shown does not come with all posts


3.2 Optional cable cover positions



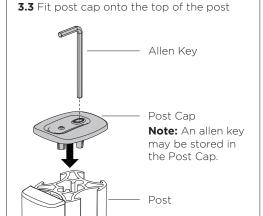


4.4 Feed remaining cable

## 4. Cable clips and cover

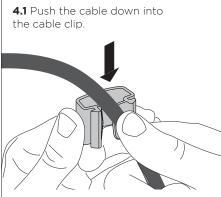


Note: Cable clips do not come with all posts. Additional clips sold separately.

4.2 Insert one side of the cable clip into the channel on the post assembly, then push in the other side.

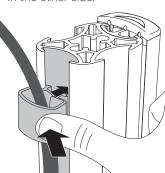

4.3 Loop cable and insert into cable cover.

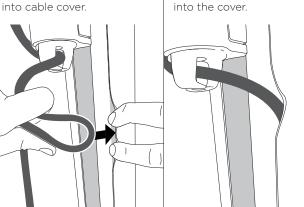



No portion of this document or any artwork contained herein should be reproduced in any way without the express written consent of Atdec Pty Ltd. Due to continuing product development, the manufacturer reserves the right to alter specifications without notice. ©20180518E