




### Utility Panel 465x120

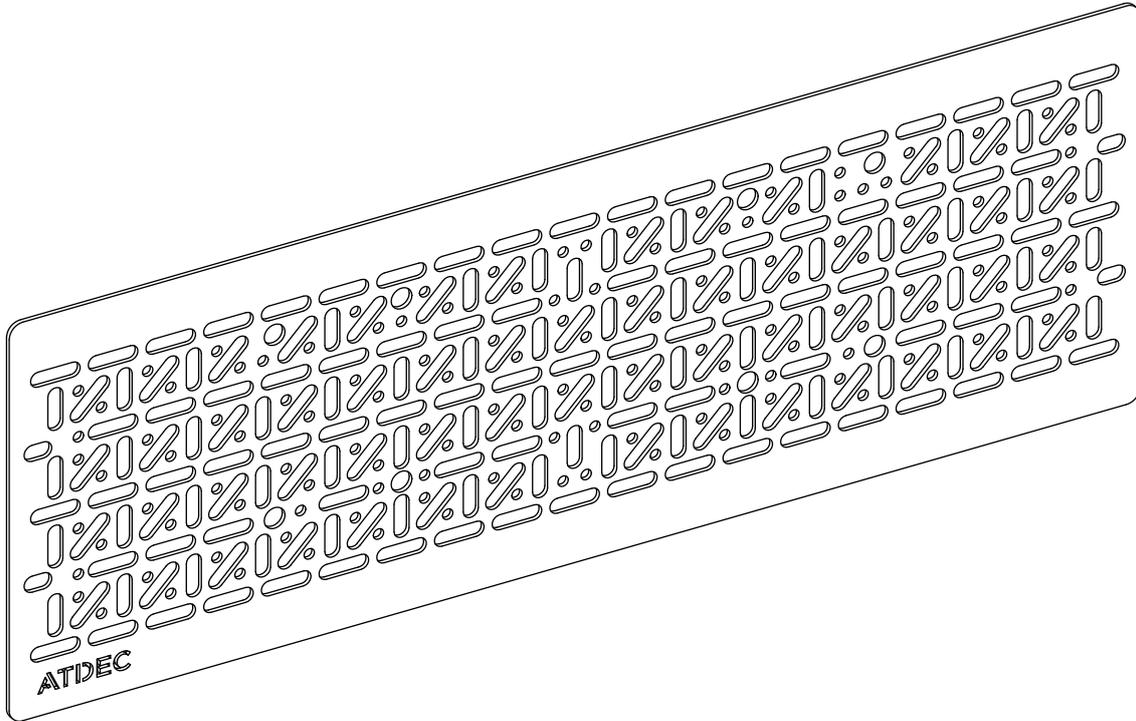

#### COMPONENT CHECKLIST

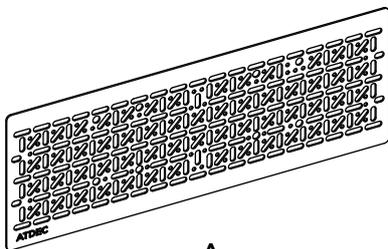

**A**  
Utility  
Panel



**B**  
Rectangular  
Nut  
(x4)



**C**  
M6x10  
Screw  
(x4)

#### REQUIRED TOOLS

- 4mm Hex Key

#### WEIGHT RANGE

0 - 10kg  
(0 - 22lbs)

#### IMPORTANT INFORMATION

- ! Please ensure this product is installed as per these installation instructions.
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! This product is not suitable for outdoor use.
- ! This product is compatible with Atdec ADB Rails and Uprights, as well as AD-TVC-20, 45, 70A and 75 AV Carts.



# 1. Mount components to Panel

**1.1.** It may be useful to mount components to Utility Panel **A** before attaching the panel to a rail, upright or cart.

To do so, align the mounting holes on the components to the pattern on Utility Panel **A** and secure with fasteners as specified by the component manufacturer.

Washers are also recommended


**1.2.** Alternatively, hook and loop straps and cable ties can also be used to mount components to Utility Panel **A** (sold separately).

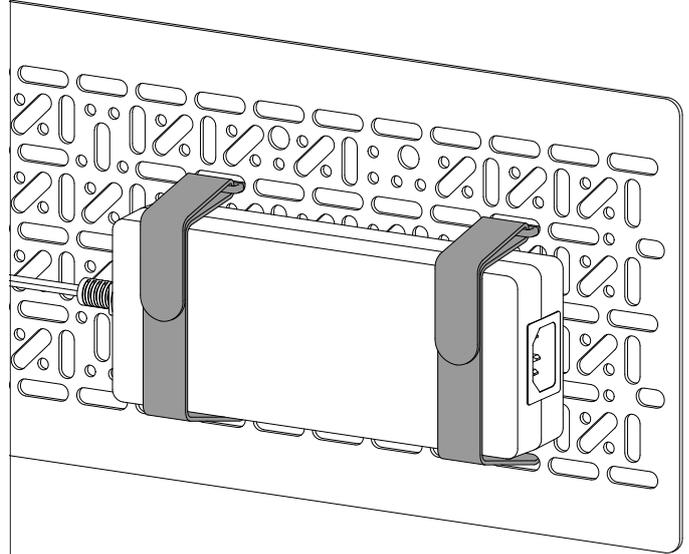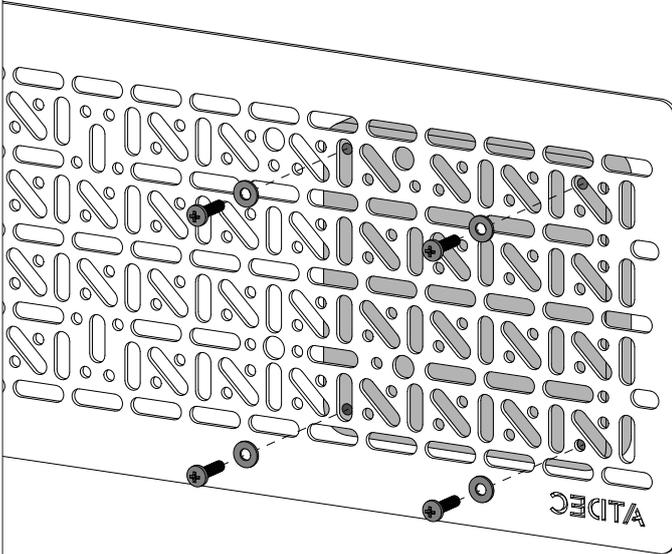

**TIP:** Consider if components or fasteners may interfere with the rail, upright or cart.


# 2. ADB Rails / Uprights

**2.1.** Loosely pre-install Rectangular Nuts **B** to locations on Utility Panel **A** that align with the rail or upright channels using M6x10 Screws **C**.

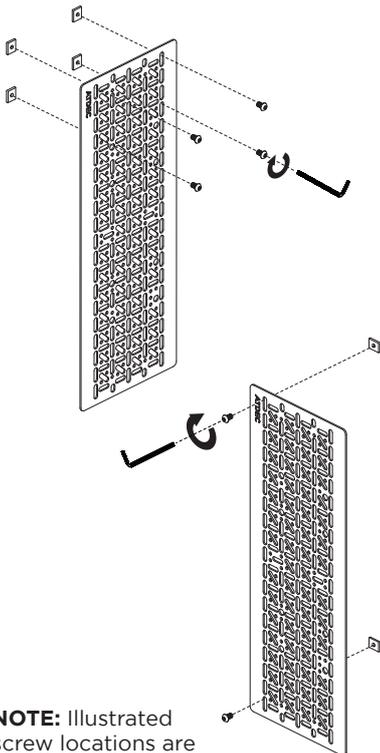


**NOTE:** Illustrated screw locations are for example only.

**2.2.** Orient Rectangular Nuts **B** as illustrated below for Rails and Uprights and slide them into the relevant channel.

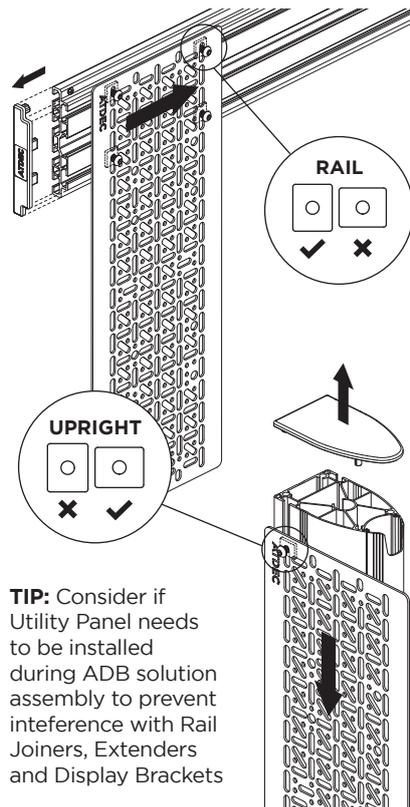


**TIP:** Consider if Utility Panel needs to be installed during ADB solution assembly to prevent interference with Rail Joiners, Extenders and Display Brackets


**2.3.** Tighten M6x10 Screws **C** to secure the panel.

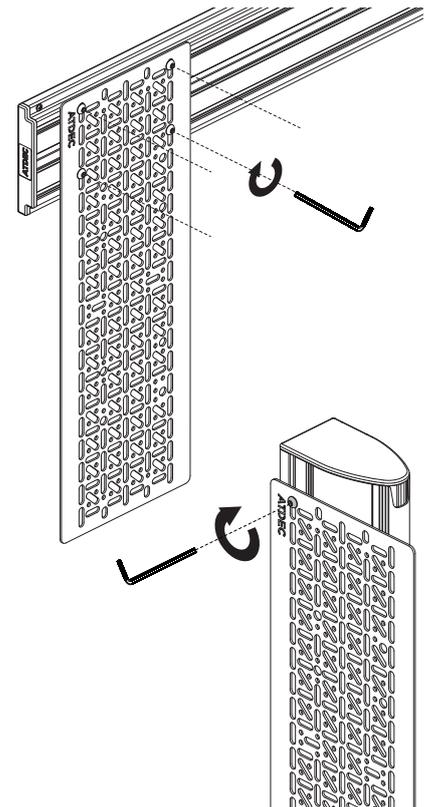

### 3. AD-TVC-70A

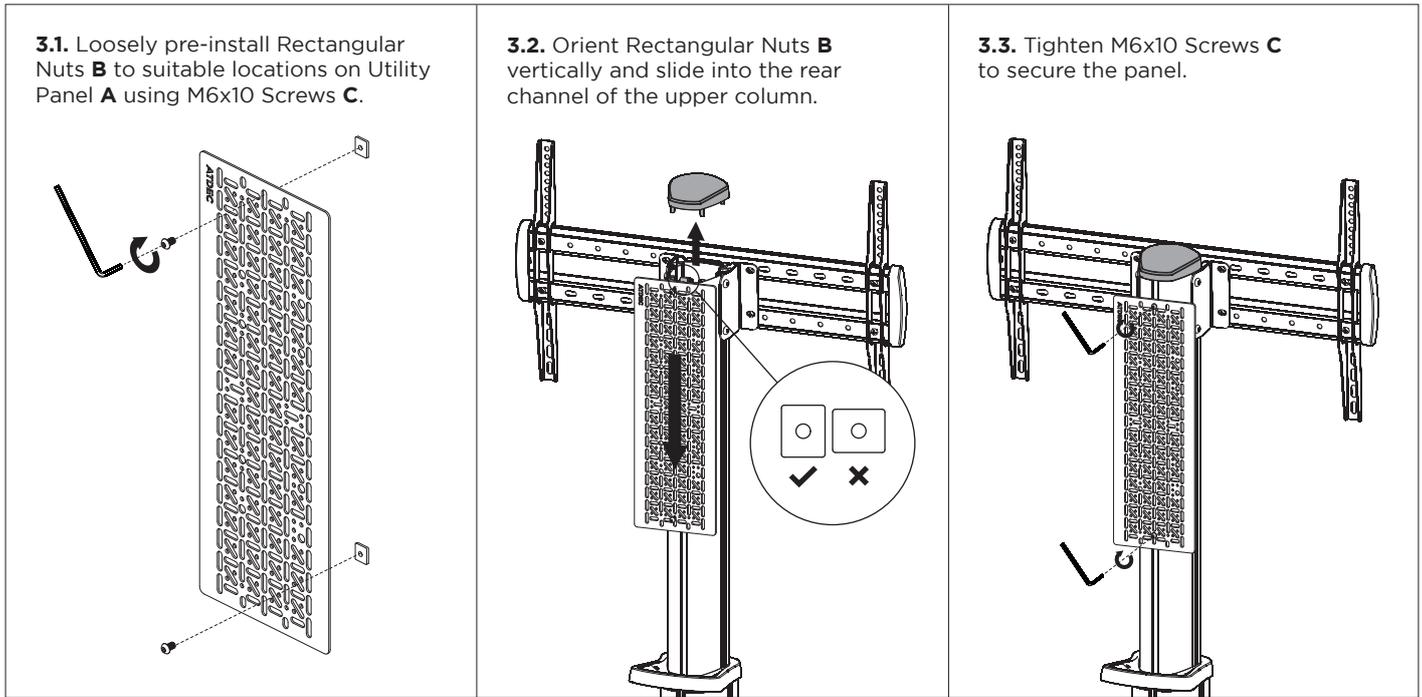

### 4. AD-TVC-45 / AD-TVC-75

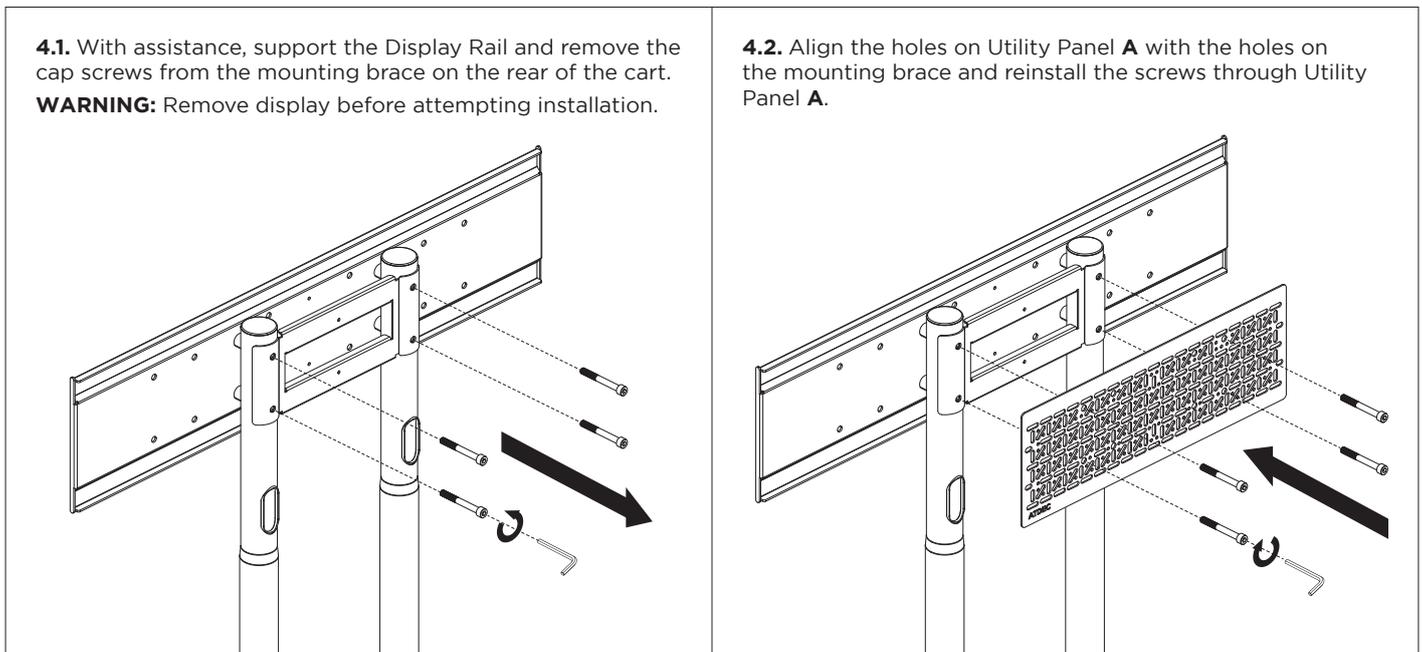

### 5. AD-TVC-20

